



# INSTRUCTIONS FOR: TROLLEY JACK & AXLE STANDS

MODEL No: **1030CXDK**

Your new Jack is produced and manufactured to a high standard of dependability and will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

## 1. SAFETY PRECAUTIONS

### TROLLEY JACK

- ✓ Ensure the jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. *Use genuine parts only. The use of improper parts may be dangerous and will invalidate the warranty.*
- ✓ Locate the jack in a suitable, well lit working area.
- ✓ Keep working area clean and tidy and free from unrelated materials.
- ✓ Use jack on level and solid ground, preferably concrete. *Avoid tarmac as jack may sink in.*
- ✓ Place wedges under wheels of vehicle (*but ensure wheels of jack can freely move*).
- ✓ Ensure the vehicle handbrake is engaged, engine is switched off and transmission is in gear (or "PARK" if automatic).
- ✓ Ensure minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- ✓ Only place jack under those lifting points recommended by vehicle manufacturer (*see vehicle handbook*).
- ✓ Check the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ☐ **DANGER:** *Use the jack for lifting only, NOT for supporting the lifted load.*
- ✓ Use suitable capacity axle stands under the vehicle before proceeding with any task.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ Use a qualified person to maintain or repair the jack hydraulic system.
- x **DO NOT** operate the jack if damaged.
- x **DO NOT** allow untrained persons to operate the jack.
- x **DO NOT** exceed the rated capacity of the jack 2 tonne. When lifting a load of maximum capacity or close to it, it is recommended that the effort be reduced by the use of assistance during this operation.
- x **DO NOT** allow the vehicle to move while supported by the jack, or use the jack to move the vehicle.
- x **DO NOT** jack vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substances.
- x **DO NOT** work under the vehicle until axle stands have been correctly positioned.
- x **DO NOT** use the jack for purposes other than that for which it is intended.
- x **DO NOT** top up hydraulic system with brake fluid. Use hydraulic jack oil only.
- x **DO NOT** adjust the safety overload valve.
- ✓ When not in use store jack, fully lowered, in a safe, dry, childproof area.



### AXLE STANDS

- ✓ Ensure axle stands are in good order and condition. **DO NOT** use if damaged.
- ✓ Ensure you familiarise yourself with the product and its folding mechanism. Ensure the locking pin is in place before use.
- ✓ Apply handbrake and chock wheels before jacking and using stands. (Put automatics in 'Park')
- ✓ When raising centre column to engage load ensure centre of saddle is located under vehicle's jacking point.
- Refer to vehicle handbook for jacking points.
- ▲ **DANGER!** Great care must be taken to ensure you lower the vehicle load slowly and carefully onto stands.
- ✓ Ensure that vehicle and stands are stable before starting work.
- x **DO NOT** use on soft ground or tarmac. Use on concrete only.
- x **DO NOT** use single stand. Only use in pairs.
- x **DO NOT support more than 4 tonnes per pair (capacity = 2 tonne per stand).**
- x **DO NOT** use 4 stands on one vehicle.
- x **DO NOT** jack on end of vehicle if the other end is already on stands.
- x **DO NOT** use for three wheeled vehicles or trailers. Refer to maker's instructions.
- x **DO NOT** use stands if damaged.



▲ **DANGER!** DO NOT OVERLOAD AXLE STANDS BEYOND RATED CAPACITY. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE AXLE STANDS. POSITION LOAD ON CENTRE OF SADDLE ONLY. ALWAYS USE STANDS IN PAIRS ON HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. FAILURE TO FOLLOW THESE INSTRUCTIONS, MAY RESULT IN DAMAGE TO AXLE STANDS, LOSS OF LOAD, RESULTING IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY, OR LOSS OF LIFE.

## 2. SPECIFICATIONS

### TROLLEY JACK

Capacity	2tonne
Minimum Saddle Height	130mm
Maximum Saddle Height	330mm
Maximum Chassis Height	140mm
Length	440mm
Weight	8kg

### AXLE STANDS

Capacity Each	.2tonne
Capacity Pair	.4tonne
Minimum Height	.275mm
Maximum Height	.365mm

### 3. BEFORE FIRST USE

#### TROLLEY JACK

Before using jack, purge hydraulic unit in order to eliminate any air in the system. Locate the handle (fig 1H) onto the release valve nut (fig 1V) and open valve by turning the handle anti-clockwise, place handle back into the jacking point (fig 1A) and pump for 30 to 40 seconds. When complete, close the release valve by turning the valve nut (fig 1V) clockwise.

Place a few drops of hydraulic jack oil on pump piston. Thoroughly lubricate moving parts.

#### AXLE STANDS

Familiarise yourself with the product. Check that the stands are in good order and condition and that no damaged has been sustained during transit. Familiarise yourself with the folding mechanism (fig 2.1) and legs (fig 2.2). Insert the centre column (fig 2.3) in the centre tube (fig 2.4), adjust to height required and insert the locking pin (fig 2.5). When lowering the centre column, hold the centre column firmly before removing the pin. Failure to do so will allow the centre column to free fall through the centre tube (fig 2.4) which may be dangerous.

### 4. OPERATING INSTRUCTIONS

#### TROLLEY JACK

##### 4.1. General.

- WARNING!** Before lifting ensure Section 1 safety instructions are read and understood.

- 4.1.1. Prepare the vehicle as mentioned in the safety instructions ensuring the ground on which the jack is to stand is level and solid (not tarmacadam).
- 4.1.2. Position the jack saddle under the vehicle manufacturer's recommended lifting point.

##### 4.2. Jacking the vehicle.

- 4.2.1. Turn the handle clockwise to close the release valve (fig 1V) place handle in jacking point (fig 1A) and commence pumping handle up and down, using maximum strokes, until the jack saddle reaches the vehicle jacking point. Check the jacking point is centrally located on the saddle and raise the vehicle.

- 4.2.2. Should the jack become overloaded, a safety excess pressure valve will open, and stop the vehicle from lifting.

- WARNING!** The jack is a lifting device only and must not be used to support the load. Use correctly rated axle stands to support the load. When lifting a load of maximum capacity (2 tonne) or close to it, it is recommended that the effort be reduced by the use of assistance during this operation.

##### 4.3. Lowering the vehicle

- 4.3.1. If using axle stands, raise the jack high enough for the stands to be easily removed. Then place handle on release valve nut (fig 1V) and turn anti-clockwise, very slowly, to open the valve.

- 4.3.2. The lowering speed is controlled by the amount you turn the handle. Lower carefully, avoid any sudden changes in descent rate which would shock load the hydraulic system.

- WARNING!** Ensure there are no persons or obstacles beneath the vehicle, or in the path of its descent.

#### AXLE STANDS

##### 4.4.1 Ensure the maximum load does not exceed 4 tonnes per pair of axle stands (2 tonne for each stand).

- 4.4.2. Refer to vehicle owner's handbook for correct jacking procedure. Check to ensure that manufacturer's recommended jacking points are in good condition.

- 4.4.3. Ensure the vehicle parking brake is on and wheels are chocked.



- 4.4.4. Ensure the stand legs are fully extended and adjust height of stand to correspond with the raised vehicle.

Check that the locking pin is correctly pushed all the way through the centre column and out of the other side, then position stands under vehicle at points specified by vehicle manufacturer.

- 4.4.5. Carefully and slowly lower the load onto stands. Ensure the jacking points sit in the centre of the stand saddles and check that the stands are stable and not leaning.

- 4.4.6. After use, hold the centre column (fig 2.3) firmly when removing the locking pin (fig 2.5). Failure to do so will allow the centre column to fall freely through the main centre tube which could be dangerous.

- WARNING!** Ensure you follow all instructions carefully. **DO NOT** load stands off centre. Failure to heed this warning may cause damage, serious injury or loss of life!

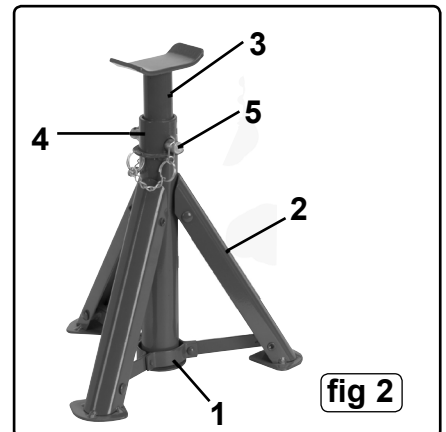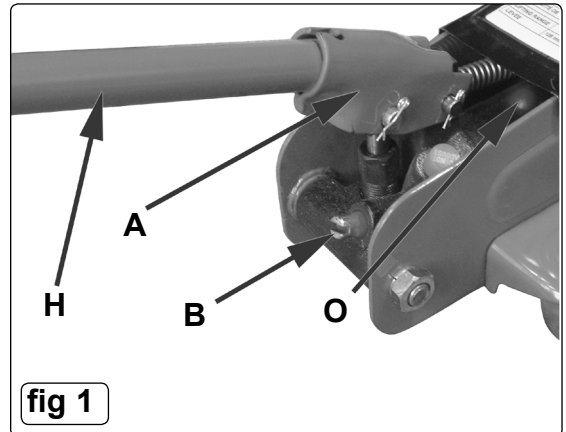

### 5. MAINTENANCE

#### TROLLEY JACK

- 5.1. When the jack is not in use, the ram should be in its lowest position to minimise corrosion. Remove the handle to inactivate jack.

- 5.2. Keep the jack clean and lubricate all moving parts with acid free oil on a regular basis.

- 5.3. Before each use check for broken, cracked, bent, or loose parts, or any visible damage to ram, pump, saddle, lifting arm, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found remove jack from service and take necessary action to remedy the problem.

**DO NOT** use the jack if believed to have been subjected to abnormal load or shock load.

- 5.4. Periodically check the pump piston and the ram for signs of corrosion. Clean exposed areas with a clean oiled cloth.

- 5.5. After one year the oil should be replaced in order to extend the life of the jack. Use hydraulic jack oil only.

**IMPORTANT:** Only fully qualified personnel should attempt hydraulic maintenance or repair.

- 5.6. To check the oil level, fully lower the jack. Remove filler screw (fig 1.O). The correct level is the bottom of the screw hole. If oil level is low, fill as required.

**NOTE:** Use a good quality jack oil, such as SEALEY HYDRAULIC JACK OIL.

- WARNING:** **DO NOT** use brake fluid, or any fluid other than hydraulic jack oil as this may cause serious damage to the jack and will invalidate the warranty!

- 5.7. To drain the oil, remove the filler plug and raise front of jack. Make sure that no dirt is allowed to enter the hydraulic system.  
**IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.**  
*Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.*  
**DO NOT RETURN JACKS TO US.** Please telephone us on 01284 757500 to obtain the address and 'phone number of your local agent. If jack is under guarantee contact your local Sealey dealer.  
**De-commissioning the Jack** - Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.
- AXLE STANDS**
- 5.8. Before each use check to ensure stands and stand welds are not cracked, and that there are no missing and/or damaged parts.  
 **WARNING!** Any stand that appears to be damaged in any way *must be removed from service immediately.*
- 5.9. Ensure the locking pin, folding arms and mechanism are in good order and condition.
- 5.10. Due to the potential hazards associated with these stands, do not misuse, or make any modification to the stands or components.

## 6. TROUBLESHOOTING

**IMPORTANT: MAINTENANCE OR REPAIR OF HYDRAULIC SYSTEM MUST ONLY BE PERFORMED BY A QUALIFIED PERSON.**

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load	1) Overloaded 2) Oil level low 3) Release valve not correctly closed 4) Air in system 5) Piston rod not functioning 6) Packing worn or defective	1) Be sure to use jack with adequate capacity 2) Top up oil level 3) Check and close release valve 4) Open release valve and pump the handle a few times. Close valve and re-try 5) Clean and replace oil 6) Replace packing
Jack does not lift high enough or feels "spongy"	1) Oil level too high or too low 2) Worn seals 3) Air in system 4) Release valve not closed	1) Fill or remove excess oil 2) Return jack to local service agent 3) Open release valve and pump the handle a few times. Close valve and re-try 4) Check and close release valve
Jack lifts poorly	1) Pump packing or valves malfunctioning 2) Oil is dirty 3) Air in the system	1) Replace packing and/or clean valves 2) Replace oil 3) Open release valve and pump the handle a few times. Close valve and re-try
Jack lifts but will not hold load	1) Release valve partially open 2) Dirt on valve seats 3) Air in system 4) Faulty seals 5) Packing worn or defective	1) Check and close release valve 2) Lower jack, close release valve. Place foot on front wheel and pull up lifting arm to it's full height by hand. Open the release valve to lower arm 3) Open release valve and pump the handle a few times. Close valve and re-try 4) Replace packing or contact local service agent 5) Replace packing
Jack will not lower completely	1) Unit requires lubrication 2) Piston rod bent or damaged 3) Jack frame/link system distorted due to overloading/poor positioning 4) Air in system 5) Release valve partially closed 6) Jack spring damaged or unhooked.	1) Oil all external moving parts 2) Replace rod or contact local service agent 3) Replace damaged parts or contact local service agent 4) Open release valve and pump the handle a few times. Close valve and re-try 5) Check and fully open release valve 6) Replace spring or contact local service agent
Jack does not lower at all	1) Release valve closed	1) Check and fully open release valve

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,  
 Kempson Way, Suffolk Business Park,  
 Bury St. Edmunds, Suffolk,  
 IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk