



INSTRUCTIONS FOR: AXLE STANDS 22TONNE CAPACITY PER STAND 44TONNE PER PAIR ALUMINIUM MODEL NO: AS22.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

1. INTRODUCTION & SPECIFICATION

Heavy-duty axle stands to safely support vehicles for extended periods of time. Large saddles for good load distribution. The heavy gauge steel frame and base plate with continuously welded construction gives superior strength and safety and minimizes distortion. Supplied with captive, multi-position pin load support.

Model No: AS22.V2
Capacity Each: 22tonne
Capacity Pair: 44tonne
Minimum Height: 335mm
Maximum Height: 500mm

N.B. IN ORDER TO OBTAIN THE CAPACITIES SHOWN, THE VEHICLE MUST BE EVENLY SUPPORTED BY TWO VERTICAL STANDS.

2. SAFETY INSTRUCTIONS

- ✓ Ensure axle stands are in good order and condition. **DO NOT** use if damaged.
- ✓ Apply vehicle parking brake and chock wheels before jacking and using stands (put automatics in 'Park')
- ✓ Raise the centre column of the stand and ensure the centre of the yoke/saddle is located vertically beneath vehicle jacking point. Refer to vehicle handbook for jacking points.
- ✓ **DANGER!** Great care must be taken to ensure you lower the vehicle slowly and carefully onto the centres of the axle stands.
- ✓ Ensure that vehicle and stands are stable and vertical before starting work.
- x **DO NOT** use on soft ground or tarmacadam. Use on concrete only.
- x **DO NOT** use single stand. Only use in pairs.
- x **DO NOT** support more than the maximum capacity, as written on the axle stand, *per pair* (i.e. 44tonnes *per pair*).
- x **DO NOT** use four stands on one vehicle, this would not be stable.
- x **DO NOT** jack one end of vehicle if the other end is already on stands or the load will topple.
- x **DO NOT** use for three wheeled vehicles or trailers. Refer to maker's instructions.
- x **DO NOT** use stands if suspected to be damaged.

⚠ WARNING!

DO NOT OVERLOAD AXLE STANDS BEYOND RATED CAPACITY. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE AXLE STANDS. POSITION LOAD ON CENTRE OF YOKE/SADDLE ONLY. ALWAYS USE STANDS IN PAIRS ON HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. FAILURE TO FOLLOW THESE INSTRUCTIONS, MAY RESULT IN DAMAGE TO AXLE STANDS, LOSS OF LOAD RESULTING IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY OR LOSS OF LIFE.

3. OPERATION

- 3.1. Refer to vehicle handbook for correct jacking procedure. Check to ensure manufacturer's recommended jacking points are in good condition.
- 3.2. Position stands under jacking points.
- 3.3. To adjust stands, lift column up to jacking point, lower until a pin hole is visible, push pin all the way through it.
- 3.4. Carefully and slowly lower vehicle onto stands. Ensure load bearing points sit in the centre of the yoke/saddle and that the stands are stable.

⚠ **DANGER!** You must follow instructions carefully and ensure you **DO NOT** load the stands off centre. Failure to heed these warnings may cause damage, injury or loss of life!



4. MAINTENANCE & INSPECTION

- 4.1. Before each use, check that the stands welds and component parts are not flawed and that there are no missing parts. *Any suspect axle stands must be removed from service immediately.*
- 4.2. Due to the potential hazards associated with stands, do not misuse, or make any modification, to the stands or components.
- 4.3. It is the responsibility of the owner to ensure that the operator has read these instructions together with the safety features on the side of the stand and that the operator is familiar with the stands use and limitations.

Parts support is available for this product. To obtain a listing and/or diagram, please log on to: www.sealey.co.uk, email: sales@sealey.co.uk or phone: 01284 757500

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk