



INSTRUCTIONS FOR:
PORTABLE CHARCOAL BBQ
MODEL No: **BBQ01**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1. GENERAL SAFETY

- WARNING! USE OUTDOORS ONLY.** Be aware the burning (or smouldering) charcoal gives off lethal amounts of carbon monoxide (CO).
- WARNING! Accessible parts may be very hot. Keep young children away.**
- X* **DO NOT** move the barbecue whilst it is in operation.
- X* **DO NOT** when using your barbecue, leave it unattended.
- X* **DO NOT** use this barbecue in a garage or any enclosed area (including tents). Keep the area in which it is being used clear (at least one metre) of any combustible materials.
- X* **DO NOT** light barbecue on a surface that may be damaged by hot fat or heat.
- X* **DO NOT** light barbecue in an area of dry vegetation.
- ✓ Be prepared if an accident or fire should occur. Know where your first aid kit and fire extinguishers are and how to use them correctly.
- ✓ Always cook with great care.
- ✓ Stand on a level surface.
- ✓ Use oven gloves and sturdy long handled barbecue tools when cooking on the grill.
- ✓ Keep pets and children at a safe distance.
- ✓ Ensure the appliance has cooled completely before emptying of ash and storing.
- ✓ The barbecue should be cleaned on a regular basis.

NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

2. INTRODUCTION & SPECIFICATION

Sturdy steel barrel portable charcoal barbecue. Single grill use or alternatively, lid opens fully and turns into second grill for larger cooking area with stainless steel surfaces. Lid fastens securely for easy portability. Ideal for picnics, camping trips or garden.

| | |
|---------------------|-------------------|
| Model No: | BBQ01 |
| Cooking Area: | 350 x 225mm (x2) |
| Cooking Height: | 170mm |
| Overall Dimensions: | 420 x 290 x 360mm |




3. ASSEMBLY (fig.1)

- 3.1 Affix the legs to the unit by means of M6 x 25 screws (x 6) and M6 nuts, the nuts to be on the inside of the case. Attach the carrying handle to the case lid by means of M5 x 10 (x2) screws and nuts.



4. OPERATION

- **Ensure that you are familiar with the Safety Instructions in Section 1 before use.**
- 4.1. **To use as a single grill barbecue:** Unclip the case. Hook the two locking struts (fig.2) into place to hold the lid open (fig.3) Place one of the grates (smaller wire rack) in the bottom of the housing, place the fuel on this grate and place the grill (larger wire rack) on the lips either side of the housing. The barbecue is now ready for use.

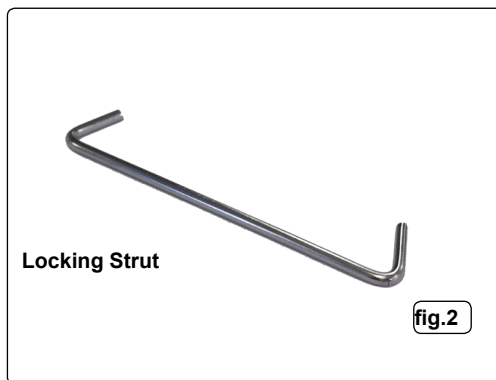

- 4.2. **To use as a double grill barbecue:** Do not use the locking struts but allow the case to open out completely with the lid resting on the carrying handle (fig.4). Place the other two wire racks in the lid, as in 4.1.
- 4.3. When cooking is finished, take care to ensure that the barbecue has cooled completely before emptying of ash, closing up and storing.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY Garden & LEISURE

Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

01284 757500

01284 703534

www.sealey.co.uk

sales@sealey.co.uk