



INSTRUCTIONS FOR:
CHARCOAL BARREL TYPE BBQ
MODEL No: **BBQ03**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1. GENERAL SAFETY

- WARNING! USE OUTDOORS ONLY.** Be aware burning (or smouldering) charcoal gives off lethal amounts of Carbon Monoxide (CO).
- WARNING! Accessable parts may be very hot. Keep young children away.**
- DO NOT** move the barbecue whilst it is in operation.
- DO NOT** when using your barbecue, leave it unattended.
- DO NOT** use this barbecue in a garage or any enclosed area (including tents). Keep the area in which it is being used clear (at least one metre) of any combustable materials.
- DO NOT** light the barbecue on a surface that may be damaged by hot fat or heat.
- DO NOT** light the barbecue in an area of dry vegetation.
- Be prepared if an accident or a fire should occur. Know where your first aid kit and fire extinguishers are and how to use them correctly.
- Always cook with great care.
- Stand on a level surface.
- Use oven gloves and sturdy long handled barbecue tools when cooking.
- Keep pets and children at a safe distance.
- The barbecue will become hot so handle with the help of oven gloves.
- Ensure the appliance has cooled completely before emptying of ash and storing.
- The barbecue should be cleaned on a regular basis.

NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

2. INTRODUCTION & SPECIFICATION

Barrel style charcoal barbecue, powder coated with enamel finished cooking grill and wire warming shelf. Adjustable charcoal grid height and vents top and bottom, allow added control over cooking heat on food. Wire shelf for storage and wheels for easy mobility.

Model No: BBQ03
Overall Dimensions (WxDxH): 800x640x1040mm
Cooking Area: 590x400mm
Cooking Height: 850mm

3. ASSEMBLY

3.1 Refer to attached Parts Diagram.

When starting to assemble, remove all of the parts from the packaging and check if anything is missing against the parts list.

- 3.1.1. Push left front leg (19) into right front leg (16) and push left rear leg (17) into right rear leg (13).
- 3.1.2. Fit bottom shelf (18) by hooking corners into holes in bottom of the four legs.
- 3.1.3. Push axle through holes in bottom of right hand legs, fit wheels (14) onto axle and secure with black plastic end caps.
- 3.1.4. Fit the two reinforcement pieces (12) by screwing them onto the top of the legs (one at each end).
- 3.1.5. Fit the tub (9) using four screws from inside the tub, into the legs.
- 3.1.6. Fit the lid (2) screw into each end of the tub.
- 3.1.7. Fit the four ventilation covers (3).
- 3.1.8. Fit the handle (20) to the tub.
- 3.1.9. Fit the upper grid rack by pushing each end through the lid (push the plastic end cap over each one to hold it in place.) Screw the bottom legs of the rack through the edge of the tub.
- 3.1.10. Fit the front shelf screw from inside the tub. Fit the two shelf supports (11).
- 3.1.11. Fix the grill (7) to the charcoal ashtray. Hook the grill under the long edges of the ashtray. Hook grill adjustment handles (6) through the grill (7) to raise and lower the charcoal by hooking them onto the ends of the tub.
- 3.1.12. Place cooking grids (5) onto the barbecue.

fig.1



4. OPERATION

- **WARNING! Ensure that you are familiar with the Safety Instructions in Section 1 before use.**
- 4.1 Remove the cooking grids (5) and place the charcoal onto the grill (7) to light it. Replace the grids (5) before you start cooking.
- 4.1.1. The height of charcoal grill (7) can be adjusted to increase/ decrease cooking time.
- 4.2 When cooking is finished, make sure the barbecue has completely cooled before storing.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY Garden
& LEISURE

Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk