

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

⚠ IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Always distribute the load evenly over the surface of the bed.
- x **DO NOT** overload the truck - see Specification.
- x **DO NOT** leave unattended, especially when loaded, unless the wheels are chocked or the truck is otherwise secured.
- x **DO NOT** use truck on uneven ground and do not run over curbs or steps - use a ramp.
- x **DO NOT** allow others to ride on the truck.
- x **DO NOT** use the truck if any part is damaged, paying particular attention to the wheels.
- x **DO NOT** inflate the tyres to more than 30psi.

2. SPECIFICATION

Model No.	CST805
Max. Load.	150kg
Tyre Diameter.	210mm
Tyre Thickness.	60mm
Folded Height.	1070mm
Platform Height.	295mm
Internal Size (LxWxH)	980x540x305mm
Overall Height.	670mm

3. INTRODUCTION

Heavy-duty tubular steel framed construction with hinged mesh. Cushioned grip pull handle with smooth steering action for easy manoeuvrability. Foldable body ideal for easy storage. Fitted with four steel centred pneumatic wheels allowing smooth transport over the toughest terrain. Suitable for a wide variety of warehouse, office, garden and domestic hauling applications.

4. ASSEMBLY

- 4.1 Remove the platform truck from its packaging.
- 4.2 Go over the platform truck and ensure all fixings are secure paying particular attention to the castors and handle.
- 4.3 Stand the folded platform truck on its wheels. Expand the truck by pulling each end outwards. (fig.1)

5. TRUCK OPERATION

- 5.1 Check tyre pressures on the truck on a regular basis. Do not inflate above 30psi.
- 5.2 Do not overload the truck and ensure that the load is evenly distributed before setting off.
- 5.3 When towing the truck proceed at a safe speed especially at corners where there could be a danger of the load shifting.
- 5.4 Extra care should be taken on inclined surfaces.
- 5.5 If the truck is loaded and left unattended the wheels should be chocked.
- 5.6 Where there is a curb or step, a ramp should be used.
- 5.7 When finished, collapse the platform truck by pulling upwards on the central hinges (fig.2)



fig.1



fig.2

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.