

Thank you for purchasing a Sealey jack. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

## 1. SAFETY INSTRUCTIONS

- ✓ Regularly inspect and lubricate the jack to ensure it is in good working order and condition. **DO NOT** use the jack if damaged or a fault is suspected - check Section 5 Troubleshooting. If necessary, immediately repair or replace damaged parts.
- ✓ Use recommended parts only, the use of unauthorised parts may be dangerous and will invalidate your warranty.
- ✓ Ensure the work area is clean, tidy and free from unrelated materials and has adequate lighting.
- ✓ Use jack on level and solid ground, preferably concrete. *Avoid tarmacadam since jack may sink in.*
- ✓ If being used to lift a vehicle, park the vehicle and apply hand brake. Switch off the engine and place chocks under the wheels.
- ✓ Ensure a minimum distance of 0.5m between load and static objects such as doors, walls, etc. to allow for tilting during jacking.
- ✓ Check lifting point is centred and stable on jack saddle (off centre loads can slip). Position jack so as to avoid operating it from under the load.
- ▲ **DANGER!** Use the jack for lifting only, **NOT** for supporting the lifted load. ALWAYS USE ADEQUATELY RATED MECHANICAL SUPPORTS.
- ✓ Keep hands etc. clear of moving parts during raising and lowering of the load.
- ✓ Use a qualified person to lubricate and maintain the jack. Confirm that only recommended *hydraulic jack oil* is used during maintenance.
- ✓ **DO NOT** exceed the rated capacity of the jack and **DO NOT** operate the jack beyond its maximum pump stroke.
- ☐ **WARNING!** If lifting a vehicle, **DO NOT** allow the vehicle to move, or try to start the engine, when the vehicle is jacked up.
- x **DO NOT** jack a vehicle if it may result in the spillage of fuel, battery acid, or other dangerous substances.
- x **DO NOT** place any part of your body under load whilst it is supported by the jack. Wait until adequately rated supports have been correctly positioned.
- x **DO NOT** use jack to support extensions or cradles. **DO NOT** modify jack in any way. **DO NOT** use the jack for any other purpose other than that for which it was designed.
- x **DO NOT** top up jack with brake fluid. Use hydraulic oil only. **DO NOT** adjust the safety overload valve (fig.2.D.)
- ✓ Ensure there are no persons or obstructions beneath the load before lowering.
- ✓ Clean and securely stow the jack with the ram in the down position. **DO NOT** leave the ram extended. Ensure stowage area is dry.
- ☐ **WARNING!** Remember, it is **very dangerous** to go under a load supported by a jack **even** if additional supports are used.
- ☐ **WARNING!** The warnings, cautions and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.



## 2. INTRODUCTION & SPECIFICATIONS

Heavy-duty, industrial quality, dual purpose toe lift bottle jack. Has a lifting capacity of 10tonne on the toe of the jack and 14tonne on the head. Designed to lift heavy plant or machinery where there is limited ground clearance such as fork lift trucks, machine installation or for use on construction sites. Fitted with a 280° rotating handle to enable jacking in confined spaces.

Model No: .....	ITJ10
Lifting Capacity at Toe: .....	10tonne
Lifting Capacity at Head: .....	14tonne
Minimum Toe Height: .....	29mm
Maximum Toe Height: .....	173mm
Minimum Head Height: .....	333mm
Maximum Head Height: .....	460mm
Nett Weight: .....	38kg

## 3. OPERATING INSTRUCTIONS

- ☐ **WARNING!** Before lifting ensure Section 1 Safety Instructions are strictly followed.
- 3.1. Before using the jack, purge the hydraulic system, in order to eliminate any air that may have accumulated during transit, as follows:
  - a) Fit jack handle over release valve (fig.2.B) and turn anti-clockwise to open valve.
  - b) Insert jack handle into the sleeve (fig.2.A) and pump several times to ensure full internal lubrication and to bleed air from the system.
  - c) Fit jack handle back over the release valve and turn clockwise to close.
- 3.2. Lifting
  - ☐ **WARNING!** Ensure you use the jack according to Section 1 Safety Instructions.
  - 3.2.1. Check that the ground upon which the jack will stand is level and solid.
  - 3.2.2. Place either toe (fig.1.A) or head (fig.1.B) beneath load to be lifted, depending on the application. If using the toe, insert beneath load fully to ensure maximum stability.
  - 3.2.3. Pump the handle up and down using full strokes until the required lift is achieved.
  - 3.2.4. Should the jack become overloaded, a safety overload valve will open, and stop the load from lifting.
- 3.3. Lowering
  - 3.3.1. Ensure that any solid supports are removed from beneath the load and that there are no persons or obstacles in the path of its descent.
  - 3.3.2. The lowering speed is controlled by the amount the release valve (fig.2.B.) is opened. Turn valve anti-clockwise and lower slowly and carefully.

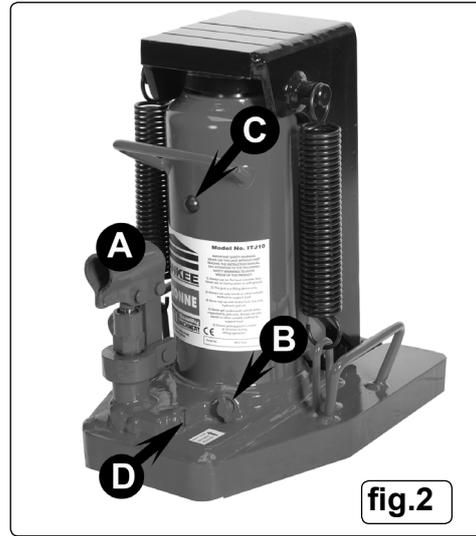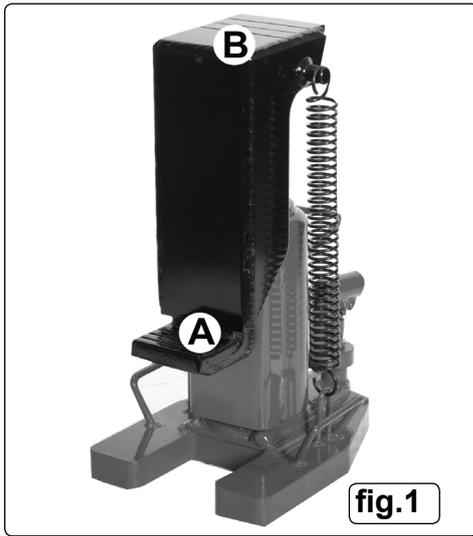

#### 4. MAINTENANCE

**IMPORTANT: Only fully qualified personnel should attempt maintenance or repair.**

☐ **WARNING: DO NOT use brake fluid, or any fluid other than Sealey hydraulic jack fluid, as to do so may cause serious damage to the jack and will invalidate the warranty!**

- 4.1. When the jack is not in use, the ram and piston must be in their lowest positions to minimise corrosion. Remove the handle to render the jack inoperable.
- 4.2. Keep the jack clean and lubricate all moving parts with acid free oil on a regular basis.
- 4.3. To check oil level, fully lower the jack. Remove filler plug (fig.2.C) The correct oil level is to the bottom of the filler opening.
- 4.4. After a year of extensive use, the oil should be replaced in order to extend the life of the jack. Drain the oil through the filler plug opening. Make sure that no dirt is allowed to enter the jack or the fresh oil.
- 4.5. To replace the oil fill as required. Pump (unloaded jack) 5 or 6 times to expel air. Pump jack to full height and pour off excess oil before refitting plug.

**Note: Ensure waste oil is disposed of in accordance with local authority regulations.**

- 4.6. Before each use check for broken, cracked, bent, or loose parts. Also check for any visible damage to welds, ram, pump, body and base. If any suspect item is found remove jack from service and take the necessary action to remedy the problem.  
**DO NOT use the jack if believed to have been subjected to abnormal load or shock. Inspect and take appropriate action.**
- 4.7. Periodically check the pump piston and piston rod for signs of corrosion. Clean exposed areas with a clean oiled cloth.

**IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE JACK .**

*Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.*

**DO NOT RETURN JACKS TO US.** Please telephone 01284 757500 to obtain address and 'phone number of your local agent. If jack is under guarantee please contact your dealer.

**De-commissioning:** Draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

#### 5. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load	1) Overloaded 2) Oil level low 3) Release valve not correctly closed 4) Air in system 5) Packing worn or defective	1) Be sure to use jack with adequate capacity. 2) Top up oil level. 3) Check and close release valve. 4) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try. 5) Return jack to local service agent.
Jack does not lift high enough or feels "spongy"	1) Oil level low 2) Worn seals 3) Air in system 4) Release valve not closed	1) Top up oil level. 2) Return jack to local service agent. 3) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try. 4) Check and close release valve.
Jack lifts but will not hold load	1) Release valve partially open 2) Air in system 3) Faulty seals	1) Check and close release valve. 2) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try. 3) Return jack to local service agent.
Jack will not lower completely	1) Ram damaged 2) Air in system 3) Release valve only partially open	1) Contact local service agent. 2) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try. 3) Check and fully open release valve.



### Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment. Waste oil should be disposed of in accordance with local authority regulations.

**NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.**

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk,  
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk