

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- X **DO NOT** sit on the motorcycle on the stand.
- X **DO NOT** start the motorcycle on the stand.
- X **DO NOT** mount the stand on tarmac, as the surface may be unstable.
- X **DO NOT** use the stand for a purpose it is not designed to perform.
- X **DO NOT** use the stand when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- X **DO NOT** allow untrained persons to operate the stand.
- X **DO NOT** make any modifications to the stand.
- X **DO NOT** operate the stand if parts are missing or damaged.
- ✓ Maintain the stand in a good clean condition for the best and safest performance.
- ✓ Locate the stand and motorcycle in a suitable area. Keep area clean, tidy and free from unrelated materials and ensure that there is adequate lighting. Also ensure that the floor/ground is level and strong enough (preferably concrete) to take the weight of the stand and the motorcycle.
- ✓ Maintain correct balance and footing whilst positioning the motorcycle on the stand, do not over reach.
- ✓ Ensure that the floor is not slippery, wear non-slip footwear.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Always support the motorcycle to prevent falling sideways (stabiliser).
- ✓ Before removing a motorcycle from the stand, ensure that there are no obstructions or persons around the motorcycle.
- ✓ When not in use, store in a safe, dry, childproof location.

2. INTRODUCTION & SPECIFICATION

2.1. Introduction.

Lifts front or back end of hard and soft tail cruiser style motorcycles quickly with relative safety. Features adjustable arm height and soft PVC sheath for protection to underside of motorcycle. Design of the stand ensures rim and tyre protection and once the motorcycle is supported, it allows easy removal of the front wheel. A detachable handle removed from the work area prevents tripping hazards. The handle can be operated from both sides of the motorcycle.

2.2. Specification.



Model No:MPS3
Minimum Height:180mm
Maximum Height:250mm
Handle (lever extended) Length:800mm approximately

3. ASSEMBLY INSTRUCTIONS

Check contents of packaging against fig.1 and fig.2. Unlikely shortages or damage refer to your Sealey Dealer immediately.

3.1. The stand requires minimal assembly before first use.

- 3.1.1. Offer the sheathed load bearing tube into the two adjustable height tubes (fig.1).
- 3.1.2. Slide the two adjustable height tubes into the fulcrum frame forks (fig.1) and insert the M8 bolts at required height. Retain with the hex nuts. **DO NOT** over tighten.
- 3.1.3. Depending upon load a handle extension is available. Insert M8 bolt to join handle with extension and retain with hex nut (fig.2).
- 3.1.4. Slide the handle or handle and extension into the required square fork of fulcrum frame full depth (fig.2).

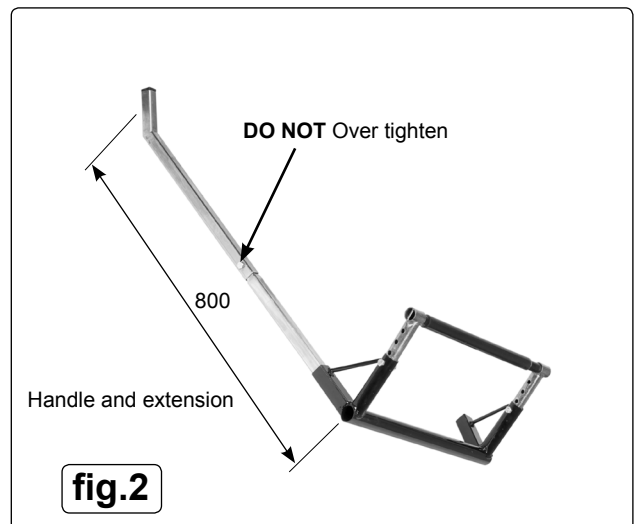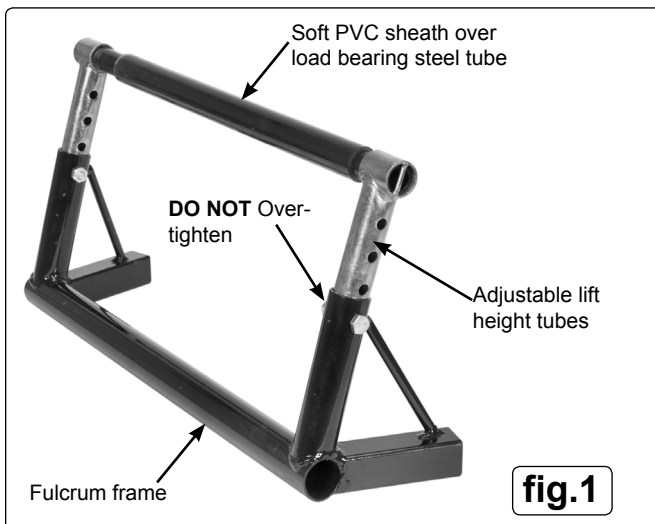

4. OPERATING INSTRUCTIONS

NOTE: The stand needs to be used in conjunction with suitable external motorcycle support to ensure full stability. Although the support stand can be operated by one person, we advise seeking the assistance of a second person. A concrete deck working area is recommended (tarmac/adam may crumble).

4.1. Setting to the correct height.


- 4.1.1. Ascertain the required lift height by measurement (fig.4). Adjust lift height tubes and lock in place by fitting M8 screws as described in 3.1.2.
- 4.1.2. Slide the handle with or without extension into fulcrum frame as described in 3.1.4.

4.2. Support stand placement (fig.3).

- 4.2.1. With the handle vertical (fig.4), slide the fulcrum support frame beneath the point to be lifted. Choose a point with mechanical integrity.
- 4.2.2. Check the path of the load bearing support bar will not crush or deform cables, pipes, exhaust or panels.
- 4.2.3. With external support options available, slowly raise the motorcycle wheel off the concrete deck using the handle (fig.5).
- 4.2.4. As the handle approaches the ground, a sweep of approximately 90°, take care not to let go of it. The weight of the motorcycle will now be pushing down (gravity) on the handle in the last 15° of total sweep angle.
- 4.2.5. Remove the handle to avoid tripping danger whilst servicing.
- 4.2.6. Check that the motorcycle is stable on the stand and suitably supported before leaving it.

4.3. Removing the stand.

- 4.3.1. Slide the handle with or without extension into fulcrum frame as described in 3.1.4.
- 4.3.2. Slowly and smoothly lift the handle of the stand upwards, ensuring that the motorcycle remains stable at all times. Continue to lift the stand handle until all the weight of the motorcycle is taken by the concrete deck.
- 4.3.3. Slide the stand away from beneath the motorcycle.

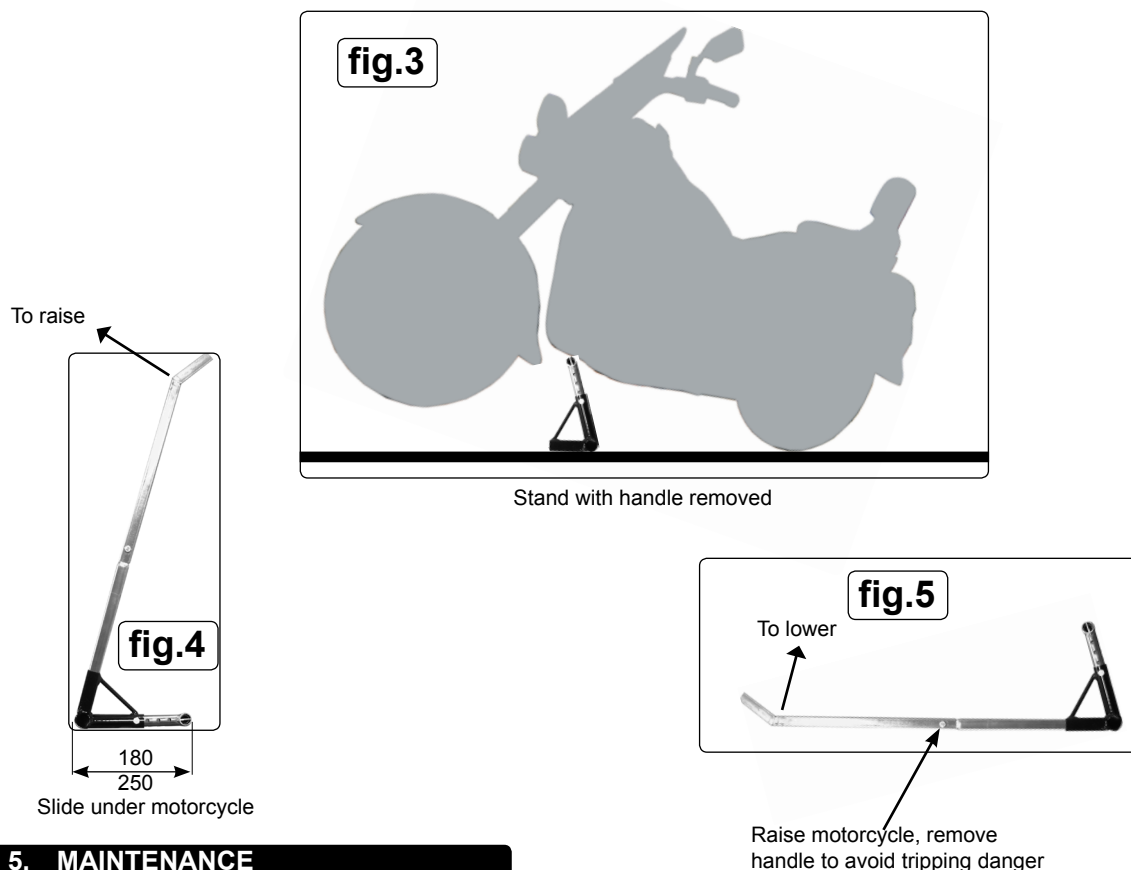

5. MAINTENANCE

- 5.1. Before each use, check all parts. If any part of the stand is damaged or defective, remove it from service and take the necessary action to remedy the problem.
- 5.2. Keep the stand clean and wipe off any oil or grease.
- 5.3. When the stand is not in use, store it in a safe, dry, childproof location.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



**Quality
MACHINERY**

Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk