

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE REFERENCE.

1. SAFETY

- WARNING!** These gun cabinets are heavy and care should be exercised in transit and handling to ensure that no one is injured.
- WARNING!** The gun cabinets are a 2 person job for transit and installation.
- For maximum security, these gun cabinets must be securely fixed to a wall or floor.
- Ensure that if secured to the wall, the cabinets is on a firm level surface.
- DO NOT** install in areas where damp and condensation are present.
- WARNING!** The warnings, cautions and instructions referred to in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.


2. INTRODUCTION

Heavy-duty gun cabinets with powder coated paint finish to prevent corrosion. Each cabinet door is evenly locked by five 25mm locking bolts, one top, one bottom and three along the side. Each cabinet includes a set of securing bolts with rear and bottom holes for fixing to the wall and floor. The gun cabinets feature electronic keypad lock or can be opened manually with the override keys provided and two small keys for locking the internal ammo safe. Each gun cabinet is manufactured in accordance with BS7558:1992.

- **CAUTION:** If you, or an intruder, uses an incorrect combination, the gun cabinet will not open and a yellow light will illuminate. Entering an incorrect PIN 3 times will freeze the system for 20 seconds and a continual 'beep' will sound. If the wrong combination is used 3 times again the system will freeze for 5 minutes and the audible 'beep' will alarm.
- Keep the gun cabinet key and any record of the combination separate from the gun cabinet and unidentified.

3. INSTALLATION

- 3.1 Consideration should be given to the placing of the gun cabinet to ensure that it is placed in a discreet location and will not be easily found by intruders.
- 3.2 Each gun cabinet is supplied with a set of anchor bolts suitable for fixing to brick and concrete.
- 3.3 Fixing to hollow partition walls is not recommended. If fixed to wood it must be to a solid wooden structure.
- 3.4 Open the door of the gun cabinet (**see 4.1 for opening instructions**) and with the help of a second person, position it where required and mark the mounting positions through the pre-drilled holes in the back or base of the gun cabinet.
- 3.5 Drill 12mm holes to a depth of 67mm (fig.1.1) and insert the anchor sleeve and nut with bolt and washer removed (fig.1.2).
- 3.6 Position the gun cabinet over the anchor holes. Place a washer over the anchor bolt and insert into sleeve through the gun cabinet, screw into nut and tighten to secure. (fig.1.3).

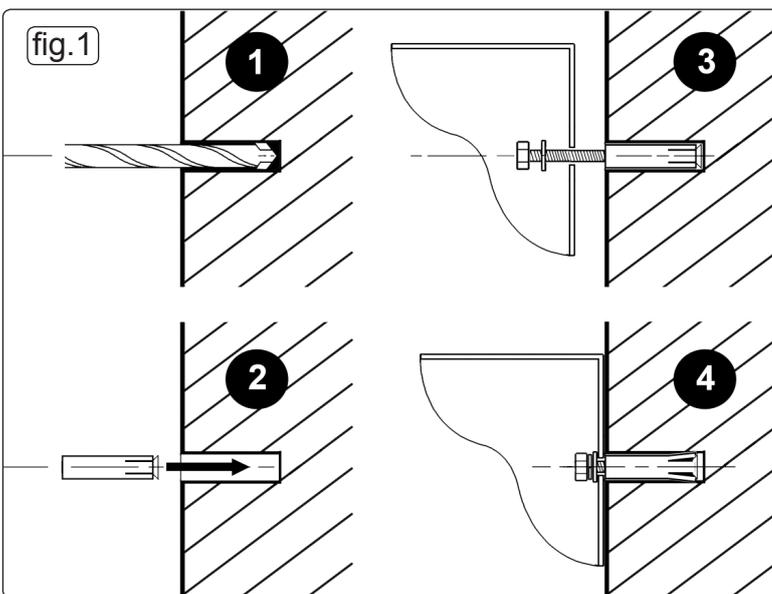

Serial Number	
---------------	--

4. OPERATION

4.1 Initial opening.

4.1.1 To open the door of the safe for the first time remove the logo panel in the centre of the main control panel. Prise out the panel using a small screwdriver. Insert key and turn anti-clockwise and the safe will be unlocked, turn the round knob on the control panel to release the cabinet handle.

4.2 Entering a new combination.

The combination must consist of between 3 and 8 numbers and should be safely recorded before being entered into the gun cabinet electronics.

4.2.1 Firstly remove the battery cover from the rear of the safe door and insert 4 AA batteries, ensuring correct polarity. Replace battery cover.

4.2.2 Press the red button on the inside of the door near the hinges.

4.2.3 Now enter your personal combination (3-8 numbers), and then press either the letter "A" or "B" to confirm your combination. A beep will sound for each key pressed then two further 'beeps' to confirm the combination has been saved. If after entering a new combination the yellow light illuminates and three 'beeps' are heard the combination has not been saved and you must start the procedure again.

NOTE! After entering the correct combination (3-8 number plus A or B), if you do not open the door within 5 seconds it will re-lock.

4.3 Operation.

4.3.1 Enter your personal combination followed by either A or B depending which you chose to confirm.

4.3.2 Turn the round knob on the control panel to release the cabinet handle.

4.3.3 Place guns into the safe. Place any ammunition into the ammo safe, Insert one of the keys into the lock and turn clockwise to unlock.

4.3.4 Store the ammunition and fully close the door of the ammo safe and turn the key anti-clockwise to lock. Remove key and keep safe.

4.3.5 Close the door of the cabinet and turn the knob on the control panel to lock the cabinet.

NOTE! If the incorrect combination is used 3 times the system will freeze for 20 seconds. If again the incorrect combination is used 3 times the system will freeze for 5 minutes. Each time the system freezes an audible 'beep' will alarm.

4.4 Key operation.

4.4.1 If you forget your combination, you can use the manual override key: **DO NOT** keep override key in gun cabinet. The override lock is situated under the logo panel in the centre of the main control panel. Prise out the panel using a small screwdriver. Insert key and turn anti-clockwise and the gun cabinet will be unlocked. Snap panel back into place afterwards.

4.4.2 Please make a note of the key number which can be found on the key or on the barrel in the gun cabinet.

4.4.3 The other set of keys supplied with the gun cabinet are for the internal ammunition safe this is at the top of the cabinet. Insert the key and turn anti-clockwise to open.

4.5 Low battery warning and replacement.

4.5.1 If the red and green lights illuminate this indicates low batteries. Change batteries by opening the gun cabinet and removing them from the back of the door. Then replace all batteries with new ones ensuring correct polarity.

4.5.2 If the keypad does not work because the batteries in the gun cabinet are exhausted, use the override key to open the gun cabinet, and then replace all batteries, ensure correct polarity.

5. KEY REPLACEMENT

5.1 Should you lose your keys we can supply replacements. To order these please contact our sales office on 01284 757500 and quote the unique serial number relating to your safe, this can be found on the front of this manual or on the front of your safe. We will also require a copy of your purchase invoice for the safe to confirm that you are the owner.

IMPORTANT! Under no circumstances will we supply replacement keys without a copy of your sales invoice. Please ensure it is kept safe after purchase.

Please note that replacement keys are special order only (we do not carry these in stock for security reasons) and as such they can take 14 – 28 days to arrive.

Environmental Protection.



Recycle unwanted materials instead of disposing of them as waste.

All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.



When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Battery Removal.



• To remove the batteries refer to section 4.5.

WARNING! Dispose of batteries according to local authority guidelines.

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk