

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. RETAIN INSTRUCTIONS FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Ensure axle stands are in good order and condition. DO NOT use if damaged.
- ✓ When centre column has been inserted into stand ensure the locking tab (Fig.1) is bent inward to stop the column from coming out.
- ✓ Apply vehicle handbrake and chock wheels before jacking and using axle stands (in automatic vehicles select 'Park')
- ✓ Raise centre column of axle stand and ensure the centre of the saddle is located under vehicle's jacking point. Refer to vehicle's handbook for jacking points.
- ✓ Ensure the centre column is locked with the locking lever down and pawl engaged with a ratchet tooth (Fig.2).
- ✓ **DANGER!** Great care must be taken to ensure you lower the vehicle slowly and carefully onto the centres of the axle stands.
- ✓ Ensure that vehicle and axle stands are stable before starting any work.
- x **DO NOT** use on soft ground or tarmacadam. Use on concrete only.
- x **DO NOT** use single axle stands. Only use in pairs.
- x **DO NOT** support more than the maximum capacity, as written on the axle stand (i.e. 3 Tonnes each, 6 Tonnes per pair).
- x **DO NOT** use four axle stands on one vehicle.
- x **DO NOT** jack one end of vehicle if the other end is already on axle stands, as the load is very likely to topple over.
- x **DO NOT** use for three wheeled vehicles or trailers. Refer to manufacturer's instructions.
- x **DO NOT** use axle stands if damaged.
- ▲ **DANGER!** Do not load axle stands beyond rated capacity. Overloading can cause damage to, or failure of the axle stands. POSITION LOAD ON CENTRE OF SADDLE ONLY. ALWAYS USE AXLE STANDS IN PAIRS ON HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF AXLE STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. Failure to follow these instructions may result in damage to the axle stands, loss of load, resulting in property damage, serious personal injury, or loss of life.
- **WARNING: The warnings, cautions and instructions set out in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator/owner.**

2. SPECIFICATION

Ratchet type axle stands with cast iron support posts. Feature angled teeth in posts, which prevent accidental release of load - the more weight applied, the tighter the post is locked.

Capacity: 3 Tonnes Each / 6 Tonnes per Pair
 Minimum Height: 287mm
 Maximum Height: 427mm

3. PREPARATION

- 3.1. Insert centre column into base of axle stand (Fig.2). Ensure toothed side of column will engage with locking lever mechanism.
- 3.2. Bend in locking tab using a small chisel and hammer (Fig.1).
- 3.3. Check axle stand is in good condition and has not suffered damage during transit.

4. OPERATION

- 4.1. Refer to vehicle's handbook for correct jacking procedure. Check to ensure manufacturer's recommended jacking points are in good condition.
- 4.2. Position axle stands under jacking points.
- 4.3. To adjust axle stands: Hold locking lever up, while lifting column to required height. Push locking lever down to lock pawl into column teeth (Fig.2).
- **WARNING! ENSURE PAWL IS FULLY ENGAGED WITH TEETH.**
- 4.4. Carefully and slowly lower vehicle onto axle stands. Ensure load bearing points sit in the centre of the saddles and that the axle stands are stable.
- ▲ **DANGER!** You must follow instructions carefully and ensure you DO NOT load the axle stands off-centre. Failure to heed these warnings may cause damage, injury or loss of life.

5. MAINTENANCE & INSPECTION

- 5.1. Before each use, check that the axle stands and the stand's welds are not cracked and that there are no missing or damaged parts. Any suspect axle stand must be removed from service immediately.
- 5.2. Due to the potential hazards associated with these axle stands, do not misuse, or make any modification to the axle stands or components.
- 5.3. It is the responsibility of the owner to ensure that the operator has read these instructions together with the safety features on the side of the axle stand and that the operator is familiar with the axle stand's use and limitations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

