

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- WARNING!** Ensure Health and Safety, local authority and general workshop practice regulations are adhered to when using tools.
- ✓ Maintain tools in good and clean condition for best and safest performance.
- ✗ **DO NOT** use tools if threads are damaged.
- ✓ Ensure that a vehicle which has been jacked up is adequately supported with axle stands.
- ✓ Wear approved eye protection. A full range of personal safety equipment is available from your Sealey dealer.
- ✓ Wear suitable clothing to avoid snagging. **DO NOT** wear jewellery and tie back long hair.
- ✗ **DO NOT** attempt to start engine or move vehicle whilst in gear, whilst working on it.
- ✗ **DO NOT** use this tool for any purpose other than that for which it is designed.
- ✓ Switch off vehicle ignition and disconnect the battery before working under the bonnet.
- ✓ Keep children and other unauthorised persons away from the working area.
- ✓ Take extreme care when disconnecting diesel fuel pipes as they may still contain fuel at high pressure.
- ✓ Ensure any disconnected fuel pipes are plugged to avoid spillage.
- ✗ **DO NOT** use this tool for any purpose other than that for which it is designed.
- ✓ Switch off vehicle ignition and disconnect the battery before working on the engine.
- ✓ Keep children and other unauthorised persons away from the working area.
- ✓ Ensure there is adequate lighting whilst using this tool.
- ✓ Ensure that the correct connector is used for the engine/vehicle being worked on.
- ✓ Account for all tools and parts being used and **DO NOT** leave them in or near the engine.
- ✓ When not in use, return all parts to the protective case and store this in a safe, dry, childproof location.
- ▲ **IMPORTANT: Always refer to the vehicle manufacturer's service instructions, or a proprietary manual, to establish the current procedure and data. These instructions are provided as a guide only.**
- WARNING!** The warnings, cautions and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

2. INTRODUCTION


Designed for quick extraction of diesel injectors fitted to VW/Audi engines, mainly Pumpe Duse. Features 700g slide hammer and four adaptors.

VW / AUDI Diesel Engines fitted to:

- 1.4 SDI/TDI
- 1.9 D/SDI/TDI/TDI(PD)
- 2.0 TDI(PD)
- 2.5 TDI/TDI(PD)
- 2.8 TDI(PD)

Common Rail:

- 2.7 TDI
- 3.0 TDI
- 4.2 TDI

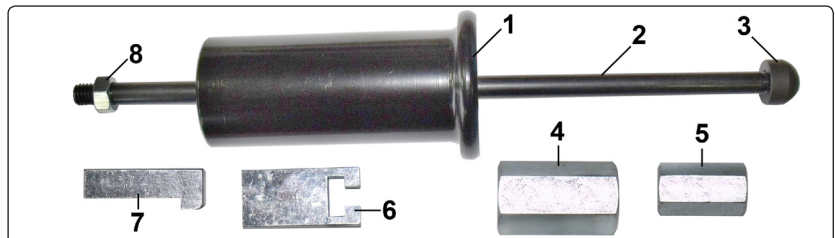

Parts:

VS2062-01 Slide Hammer	VS2062-05 Hexagonal Adaptor - Small
VS2062-02 Link Bolt	VS2062-06 'C' Adaptor
VS2062-03 Cap	VS2062-07 'J' Adaptor
VS2062-04 Hexagonal Adaptor - Large	VS2062-08 Nut

3. INSTRUCTIONS

- 3.1. Before working on the fuel system, make sure that it is de-pressurised. Refer to the manufacturer's manual on how to check this.
- 3.2. Disconnect the injector wires as per the manufacturers instructions.
- 3.3. Remove any carbon build up from around the injector.
- 3.4. Remove any necessary parts from the injector to gain access.
- 3.5. Select the appropriate adaptor for the injector, threading it on to the injector if required (threaded adaptors).
- 3.6. Screw the slide hammer assembly securely onto the adaptor and secure it by tightening the nut.
- 3.7. The injector can now be removed, by using reasonable force on the slide hammer. Be prepared for the sudden release of the injector from the cylinder head.
- 3.8. If the injector cannot be removed, it may be necessary to consult a main dealer or a diesel specialist to avoid any damage to the engine.
- 3.9. When an injector has been removed, it is recommended that only a new or refurbished injector is fitted. Follow manufacturers fitting and safety instructions.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

