

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ This trolley is designed for the removal, transportation and installation of vehicle wheels and should be used for no other purpose.
- ✓ Always lower, centre and chain the wheel before attempting to move trolley.
- ✓ Only use the trolley on firm, level, unobstructed surfaces which are capable of supporting the trolley and wheel.
- ✗ **DO NOT** overload the trolley - maximum capacity is **500kg**.
- ✗ **DO NOT** ride or allow others to ride on the trolley.
- ✗ **DO NOT** use on tarmac. The trolley must only be used on a concrete surface.
- ✓ Replace or repair damaged parts. *Use only recommended parts. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Use a qualified person to lubricate and maintain the trolley. **DO NOT** use brake fluid to top-up hydraulic unit. Use Sealey hydraulic oil only.
- **Warning!** Failure to comply with these instructions may result in loss of load, damage to trolley or other property and/or personal injury.

2. INTRODUCTION & SPECIFICATION

Suitable for changing wheels and tyres on the very largest vehicles. 8 Position adjustable roller width ranging from 440 to 780mm giving greater flexibility. Load arms incorporate smooth roller action sleeves allowing wheel to be rotated for lining up on studs. Foot operated hydraulic mechanism with dead man's control release. Mounted on two swivel and two fixed castors for stability and easy manoeuvrability. Supplied with safety chain.

Specification:

Maximum Load	500kg	Width Between Rollers . . .	440, 496, 560,
Max. Lift Height	640mm		610, 668, 724, 780mm
Min. Lift Height	50mm	Roller Length	620mm

3. ASSEMBLY

Note: Numbers used refer to the parts diagram. The trolley should be assembled by at least 2 people.

- 3.1. Place the base beam (25) onto the support beam (17) and secure with nuts and bolts (20, 21).
- 3.2. Attach upright posts (13) to base beam, ensuring that the holes at the top for attaching the handle (28) are rearward facing. Secure the posts with 3 bolts, nuts and washers (2, 14, 15, 20, 22), making sure the longer bolts (15) are fitted horizontally.
- 3.3. Fix the two swivel castors to the mounting plates on the underside of the base beam using screws (24).
- 3.4. Attach the two fixed wheels at the end of the support beam using the two large wheel pins (19) and securing with washer and split pin (2, 16).
- 3.5. Next place the jack (26) onto the base beam in between the brackets and secure with screws (12) make sure foot pedal (fig.2C) is facing rearwards.
- 3.6. Slide the lifting frame (31) over the upright posts, attach the top of the hydraulic ram to the top bracket on the lifting frame using a pin (27) washer (6) and split pin (8).
- 3.7. Slot the support beams (3) into the front brackets on the lifting frame (31), line up the holes in the bracket with the holes in the support beams and slide the axle (7) through, secure at each end with washer (6) and split pin (8).
- 3.8. Attach the handle (28) to the top of the upright posts using bolts and washers.

4. OPERATING INSTRUCTIONS

- **WARNING!** Ensure that the vehicle to be worked on is safely supported on axle stands.
- 4.1. Before first use: 1) Oil all moving parts. 2) With lifting frame (fig.2A) at lowest point check hydraulic oil level by removing filler plug (fig.2B). Oil should be at bottom of filler hole. Top up, or allow to drain, as necessary and replace plug.
- 4.2. **Lifting** - centre the trolley around the wheel, as close in as possible, and raise the lifting frame by operating the foot pedal (fig.2C).

▲ **IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.**

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK. DO NOT RETURN JACKS TO US. Please telephone us on 01284 757500 to obtain the address and phone number of your local agent. If jack is under guarantee contact your local Sealey dealer.

De-commissioning the Jack

Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

- 4.3. **Lowering** - Turn release valve (fig.2D) to lower lifting frame. Keep feet and hands away from the frame whilst it descends.

- 4.4. **Movement** - before moving the laden trolley ensure that the wheel is centred on the rollers and restrained by the safety chain (fig.2E) and that the lifting frame is as low as possible whilst still allowing clearance between tyre and floor.


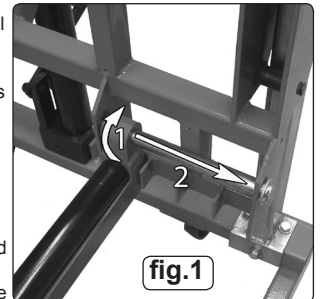


fig.1

- 4.5. **Frame width.** The lifting frame rollers can be set to these widths; 440, 496, 560, 610, 668, 724, 780mm. Each roller has to be lifted individually by its outer end so it hinges upwards (fig.1.1). When the roller bracket is clear of its locking position, slide it along its hinge pin (fig.1.2) and lower it into the alternative locking positions.

fig.2

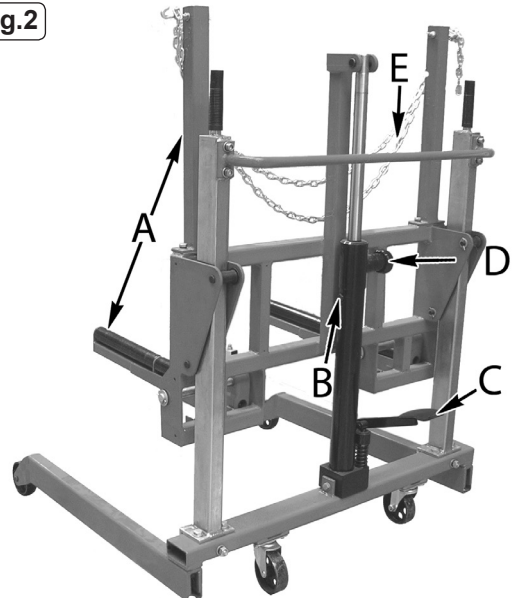

5. MAINTENANCE

- 5.1. **Daily:** Check for damage and oil leaks. **Monthly:** Oil moving parts and grease pedal-to-piston faces. Check for abnormal wear and tear.
- **WARNING: DO NOT use brake fluid, or any fluid other than hydraulic jack oil as this may cause serious damage to the jack and will invalidate the warranty!**
With lifting frame at lowest point, check hydraulic oil level by removing filler plug (fig.2B). Level should be at bottom of filler hole. Top up, or allow to drain, as necessary. Replace plug.

6. FAULT FINDING

- 6.1. Lifting frame does not reach full height - low oil level, check and fill (see 4.1.).
- 6.2. Foot pump ineffective - oil level too high, check and drain (see 4.1.).

