

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY


- WARNING!** DO NOT operate using flammable liquids in a confined space, the area should have adequate ventilation.
- 1.1 If pumping flammable liquids, avoid proximity to naked flames or welding operations.
- 1.2 Wear appropriate protective clothing when pumping solvents. We particularly recommend eye/face and hand protection, available from your authorised Sealey dealer.
- 1.3 Keep children away from areas where solvents are being used.
- 1.4 Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- 1.5 Ensure any spillages are dealt with immediately. Failure to do so could lead to injury.

2. INTRODUCTION

- 2.1 Composite pump with self-priming feature, suitable for oils and non-aggressive chemicals.
- 2.2 Delivery: 8ltr/min

3. OPERATION

- 3.1 Insert the base of the pump (A) into the suction tube (B). Ensure that the tube is pushed fully home to provide an airtight fit.
- 3.2 Screw the delivery tube (C) firmly into position, once again ensuring an airtight seal.
- 3.3 Screw the air-vent cap on the top of the pump fully down.
- 3.4 Ensure the outlet of the delivery tube is well below the level of the liquid in the container being emptied - when the levels are equal, the syphon will cease to operate.
- 3.5 Pump the handle (D) vigorously, until the flow of liquid (visible through the delivery tube) is free of air bubbles and then hold the handle down until a steady flow is established.
- 3.6 The handle can now be released and the syphon will continue until the level in the container being emptied reaches the level of the delivery tube outlet.
- 3.7 To stop the syphon, unscrew the air release cap (E) and the syphon will be interrupted.

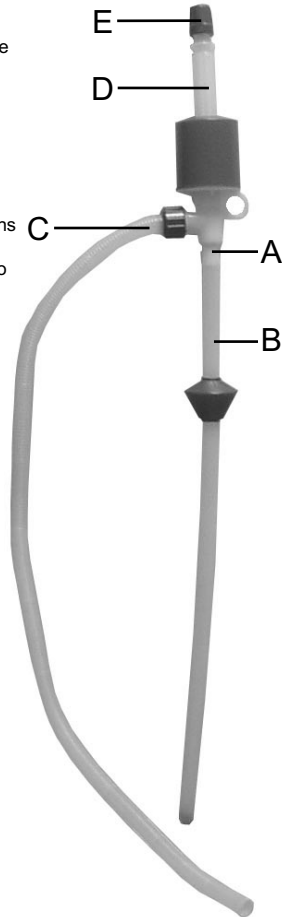

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: Call 01284 757525 for our catalogue & promotions. Leave your full name, address & postcode.

SEALEY POWER PRODUCTS Sole UK Distributor,
Sealey Group, Bury St. Edmunds, Suffolk.

01284 757500

01284 703534

sales@sealey.co.uk

www.sealey.co.uk