

INSTRUCTIONS FOR:

AIR NEEDLE SCALER

MODEL No: SA51

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- □ WARNING! Ensure health & safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- □ WARNING! Disconnect from air supply before changing accessories or servicing.
- ✓ Maintain the needle scaler in good condition and replace any damaged or worn parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- □ WARNING! Check correct air pressure is maintained and not exceeded. We recommend 90psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- ✓ Only use needles which are specifically designed for use with a needle scaler.
- ✓ Wear approved safety eye/face shield, ear defenders, and hand protection.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- $\checkmark\,$ Keep children and non essential persons away from the working area.
- **X DO NOT** use the needle scaler for a task it is not designed to perform.
- WARNING! DO NOT use needle scaler if damaged or thought to be faulty. (Contact Sealey service agent).
- x DO NOT use needle scaler unless you have been instructed in its use by a qualified person.
- x DO NOT carry the needle scaler by the air hose, or yank the hose from the air supply.
- X DO NOT operate needle scaler if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- X DO NOT carry needle scaler with your hand on the power trigger in order to avoid unintentional starting.
- **X DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from air supply and store in a safe, dry, childproof location.

2. INTRODUCTION & SPECIFICATIONS

The SA51 is suitable for cleaning heavy paint and rust scale from metal surfaces. It has a palm control trigger mechanism and replaceable scaler needles.

Stroke

Stroke
Free speed
Air consumption 3cfm
Noise Power 104.82dB(A)
Noise Pressure 93.83dB(A)
Operating Pressure 90psi
Air inlet size 1/4BSP
Weight 1kg
Vibration 8.56m/s ²
Uncertainty 1.34m/s ²
© Jack Sealey Limited



Original Language Version

SA51 Issue: 5(SP) - 20/09/13


3. PREPARING NEEDLE PULLER FOR USE

3.1. Air Supply

- 3.1.1. Ensure needle scaler valve (or trigger) is in the "off" position before connecting to the air supply.
- 3.1.2. You will require an air pressure of 90psi, and an air flow according to specification.
- 3.1.4. Drain the air tank daily. Water in the air line will damage the needle scaler.
- 3.1.5. Clean air inlet filter weekly. Recommended hook-up procedure is shown in fig 1.
- 3.1.6. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 1/4" I.D. and fittings must have the same inside dimensions.
- 3.1.7. Keep hose away from heat, oil and sharp edges. Check hose for wear, and make certain that all connections are secure.

3.2. Couplings.

Vibration may cause failure if a quick change coupling is connected directly to the needle scaler. To overcome this, connect a leader hose to the needle scaler. A quick change coupling may then be used to connect the leader hose to the air line recoil hose. See fig.1 & 2.

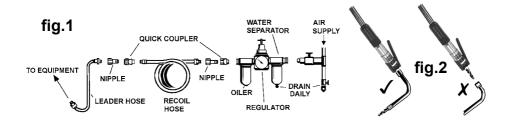

4. OPERATING INSTRUCTIONS

- □ WARNING! Ensure you read, understand and apply safety instructions before use.
- **4.1.** Remove the SA51 from the package. The tool should be assembled and ready to use.
- **4.2.** Connect the needle scaler to the air hose as in chapter 3.
- 4.3. To start the scaler, depress the trigger.
 DO NOT allow the needle scaler to free run for an extended period of time as this will shorten its life.

5. MAINTENANCE

■ WARNING! Disconnect needle scaler from air supply before changing accessories, servicing or performing maintenance. Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.

Note: Numbers in brackets refer to item numbers in the parts diagram.

- 5.1. To replace the needles (16), unscrew the needle tube (19) from the barrel sleeve (12). Replace the appropriate needles. Use only genuine Sealey needles. Screw the needle tube (19) onto the barrel sleeve (12) and tighten.
- **5.2.** Lubricate the needle scaler daily with a few drops of Sealey air tool oil dripped into the air inlet
- **5.3.** Clean the needle scaler after use.
- **5.4.** Loss of power or erratic action may be due to the following:
 - a) Excessive drain on the air line. Moisture or restriction in the air pipe. Incorrect size or type of hose connectors. To remedy check the air supply and follow instructions in chapter 3.
 - b) Grit or gum deposits in the needle scaler may also reduce performance. Flush the needle scaler out with gum solvent oil or an equal mixture of SAE No 10 oil and paraffin. Allow to dry before use.
- **5.5.** For a full service contact your local Sealey service agent.
- **5.6.** When not in use, disconnect from air supply, clean needle scaler and store in a safe, dry, childproof location.

WARNING! - Risk of Hand Arm Vibration Injury.

This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately.

This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC.

This tool is to be operated in accordance with these instructions.

This tool has been tested in accordance with: EN ISO 28927-2:2009 & BS EN ISO 15744:2008. Declaration and verification of Vibration Emission figures are in accordance with EN 12096:1997

Measured vibration emission value (a): 8.56 m/s²

Uncertainty value(k):

1.34 m/s²

Please note that the application of the tool to a sole specialist task may produce a different average vibration emission. We recommend that a specific evaluation of the vibration emission is conducted prior to commencing with a specialist task.

A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.

NB: Stated Vibration Emission values are type-test values and are intended to be typical.

Whilst in use, the actual value will vary considerably from and depend on many factors.

Such factors include; the operator, the task and the inserted tool or consumable.

NB: ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce vibration.

The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.

Health surveillance.

We recommend a programme of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.

Personal protective equipment.

We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc. Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand arm vibration can be found on the HSC website www.hse.gov.uk - Hand-Arm Vibration at Work.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste.

All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group, Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk, IP32 7AR





Original Language Version