



INSTRUCTIONS FOR:

AIR OPERATED FLAT BED SANDER

MODEL No: **SA22.V3**

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- WARNING!** Ensure Health & Safety, local authority and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Disconnect from air supply before changing accessories or servicing.
- ✓ Maintain the sander in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Use in a suitable, clean and tidy work area. Ensure that there is adequate lighting.
- ✓ Before each use check abrasive pad for condition. If worn or damaged replace immediately.
- ✓ Ensure that the correct abrasive pad size is used.
- ✓ Ensure that there are no flammable or combustible materials near the work area.
- WARNING!** Always wear approved eye or face and hand protection when operating the sander.
- ✓ Use face, dust, or respiratory protection in accordance with COSHH regulations.
- ✓ Depending on the task, sander noise level may exceed 85dB in which case wear safety ear defenders.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery. Contain and/or tie back long hair.
- ✓ Wear appropriate protective clothing and keep hands and body clear of working parts.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Ensure that workpiece is secure before operating the sander. Never hold a workpiece by hand.
- ✓ Check the workpiece to ensure that there are no protruding screws, bolts, nuts, nails, stones, etc.
- ✓ Avoid unintentional starting.
- WARNING!** Ensure correct air pressure is maintained and not exceeded. Recommended pressure is 70-90psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- ✓ Prolonged exposure to vibration from this sander poses a health risk. It is the owner's responsibility to correctly assess the potential hazard and issue guidelines for safe periods of use and offer suitable protective equipment.
- x **DO NOT** use the sander for a task it is not designed to perform.
- x **DO NOT** operate sander if any parts are damaged or missing as this may cause failure and/or personal injury.
- WARNING! DO NOT** sand any materials containing asbestos.
- x **DO NOT** carry the sander by the hose, or yank the hose from the air supply.
- x **DO NOT** force, or apply heavy pressure to the sander. Let the sander do the work.
- x **DO NOT** place air attachments close to your face and **DO NOT** point at other persons or animals.
- x **DO NOT** operate sander when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- x **DO NOT** use sander where there are flammable liquids, solids or gases such as paint solvents and including waste wiping or cleaning rags etc.
- x **DO NOT** carry the sander with your hand on the trigger.
- x **DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from air supply and store in a safe, dry, childproof location.

1.2. LEAD PAINT WARNING!

Paint once contained lead as a traditional ingredient. Contact with the dust from the removal of such paint is toxic and must therefore be avoided. The following action must be taken before using the sander on a surface that you suspect may contain lead paint.

- 1.2.1. User must determine potential hazard relating to age of paint to be removed. (Modern paints do not have lead content).
- 1.2.2. **DANGER!** Keep all persons and pets away from the work area. The following are particularly vulnerable to the effects of lead paint dust: *Pregnant women, babies and children.*
- 1.2.3. We recommend personal protection by using the following safety items:
 - a) Paint Spray Respirator (Our ref SSP1604)
 - b) General Purpose Hooded Coveralls (Our ref SSP267L/XL).
 - c) Latex Gloves (Our ref SSP24).
- 1.2.4. Take adequate measures to contain the paint dust, flakes and scrapings.
- 1.2.5. Continue to wear safety equipment as in paragraph 1.2.3. and thoroughly clean all areas when task is complete. Ensure paint waste is disposed of in sealed bags or containers according to local regulations.

2. INTRODUCTION & SPECIFICATION

The SA22.V3 has a counter-balanced drive shaft for smooth operation. Palm-type trigger with rubber head rings allows for comfortable one-handed operation.

Pad Size: 170x95mm
Free Speed: 8000rpm
Orbit: Ø5mm
Operating Pressure: 90psi
Air Consumption: 6cfm

Air Inlet: ¼" BSP
Sound (Power): 102.4dB(A)
Sound (Pressure): 91.4dB(A)
Vibration Level: 8.27m/s²
Uncertainty: 0.8m/s²
Weight: 2kg

3. PREPARING SANDER FOR USE



3.1. Air Supply

Recommended hook-up is shown in fig.1.

- 3.1.1. Ensure the sander air valve (or throttle) is in the "Off" position before connecting to the air supply.
- 3.1.2. You will require an air pressure between 70-90psi, and an air flow of 5cfm.
- 3.1.3. **WARNING!** Ensure that the air supply is clean and **does not exceed 90 psi** while operating the sander. Too high an air pressure and/or unclean air will shorten the product life due to excessive wear and may be dangerous causing damage and/or personal injury.
- 3.1.4. Drain the air tank daily. Water in the air line will damage the sander **and will invalidate your warranty.**
- 3.1.5. Clean air inlet filter weekly.
- 3.1.6. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose and fittings internal diameter should be ¼" internal diameter.
- 3.1.7. Keep hoses away from heat, oil and sharp edges. Check hoses for wear and make certain that all connections are secure.

3.2. Couplings

Vibration may cause failure if a quick connect coupling is connected directly to the air sander. To overcome this, connect a leader hose (Sealey Part No. AH2R) to the sander. A quick connect coupling may then be used to connect the leader hose to the air line recoil hose. See fig.1 & fig.2.

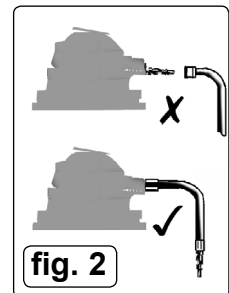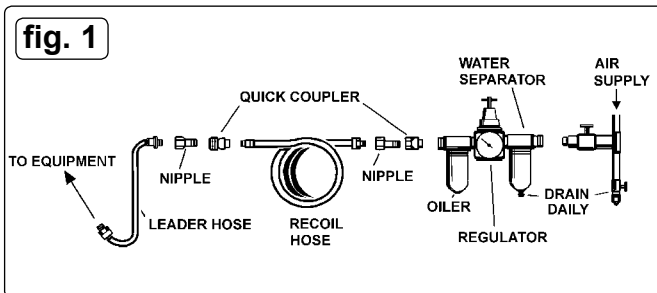

4. ASSEMBLY & OPERATION

☐ **WARNING!** Ensure that you read, understand and apply safety instructions before use.

4.1. Assembly

4.1.1. Open front paper clamp and insert the end of the sanding paper. Release clamp lever to hold paper in place. Repeat with rear clamp, ensuring that the sanding paper is tight against the sanding pad.

4.1.2. Connect air supply to sander, press the trigger and check that the sander is working correctly.

4.2. Operation

4.2.1. Always use a sanding paper appropriate for the job. Work progressively from coarse grades to finer grades. **DO NOT** go from coarse to fine in one step as it may be difficult to remove swirl marks left by the coarse grit.

4.2.2. **DO NOT** apply excessive pressure, let the sander do the work for you. Start the sander and bring it to the work surface evenly and slowly. Move the sander back and forth in overlapping areas. Remove the sander from the work surface before stopping the sander. Regularly check the sanding paper for wear and always change if cracked or damaged.

4.2.3. **DO NOT** allow sander to run in "idle" for an extended period of time as this will shorten bearing life.

5. MAINTENANCE

☐ **WARNING!** Disconnect sander from air supply before changing accessories, servicing or performing maintenance. Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*

5.1. If the air supply does not have an oiler, lubricate the sander daily with a few drops of good grade air tool oil, such as Sealey ATO/500 or ATO/1000, dripped into the air inlet before use.

5.2. Clean the sander after use and change pads when required.


5.3. Loss of power or erratic action may be due to the following:

a) Excessive drain on the air line. Moisture or restriction in the air pipe. Incorrect size or type of hose connectors. To remedy check the air supply and follow instructions in Section 3.

b) Grit or gum deposits in the sander may also reduce performance. If your model has an air strainer (located in the area of the air inlet), remove the strainer and clean it. Flush the sander with gum solvent oil or an equal mixture of SAE 10 oil and kerosene. Allow to dry before use.

If you continue to experience problems, contact your local Sealey service agent.

5.4. When not in use, disconnect sander from the air supply, clean and store in a safe, dry, childproof location.

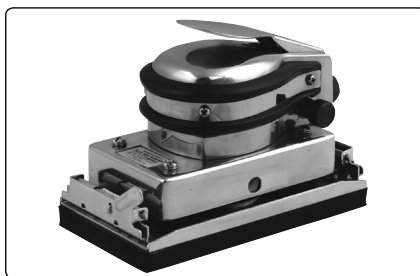

Environmental Protection.



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.


IMPORTANT: No liability is accepted for incorrect use of this product.


WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.


INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

 01284 757500

 01284 703534

 www.sealey.co.uk

 sales@sealey.co.uk

WARNING! – Risk of Hand Arm Vibration Injury.

This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately.

This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC.

This tool is to be operated in accordance with these instructions.

Measured vibration emission value (a): 8.27m/s²

Uncertainty value (k): 0.8m/s²

Please note that the application of the tool to a sole specialist task may produce a different average vibration emission.

We recommend that a specific evaluation of the vibration emission is conducted prior to commencing with a specialist task.

A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.

NB: Stated Vibration Emission values are type-test values and are intended to be typical.

Whilst in use, the actual value will vary considerably from and depend on many factors.

Such factors include; the operator, the task and the inserted tool or consumable.

NB: ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce vibration.

The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.

Health surveillance.

We recommend a programme of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.

Personal protective equipment.

We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc. Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand arm vibration can be found on the HSC website www.hse.gov.uk - Hand-Arm Vibration at Work.